

Procedure for switching display screens into pc/computer input mode

Make sure the PC and screen are switched on and the VGA Lead from the computer or ballun are connected to the screen. Check that batteries are inserted into the remote control. Also please ensure that the Balluns are powered up along with the power supplies and that the television is switched on (green light) and not off (red light is stand by).

SONY MODEL FWD 40LX2F

Press the button marked HD15 (underneath the green standby button) until the display from the PC shows on the TV screen.



**IF YOUR PROBLEMS PERSIST, PLEASE CALL THE HELP DESK ON:
0844 579 0880**